

ANTENNA REMOVAL

BE0EP-01

REMOVE ANTENNA ROD


HINT:

Do this operation with the negative (-) terminal cable connected to the battery.

- (a) Turn the ignition switch to "LOCK" position.
- (b) Remove the antenna nut.
- (c) Press the "AM" button on the radio receiver, and simultaneously turn the ignition switch to "ACC" position.

HINT:

- The rod will extend fully and be released from the motor antenna.
- After removing the antenna rod, leave the ignition switch at "ACC".

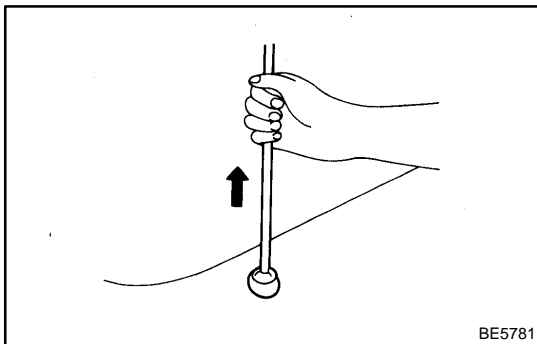

NOTICE:

To prevent body damage when the antenna rod is released, hold the rod while it comes out.