

PROBLEM SYMPTOMS TABLE**IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH**

Symptom	Suspect Area	See page
Ignition switch is not set to each position.	1. Ignition Switch	BE-13
"Key unlock warning system" does not operate.	1. GAUGE Fuse (J/B No.1) 2. Key Unlock Warning Switch 3. Door Courtesy Switch 4. Wire Harness	BE-13 BE-28

USA:**HEADLIGHT AND TAILLIGHT SYSTEM**

Symptom	Suspect Area	See page
Headlight does not light. (Taillight is normal)	1. Headlight Bulb 2. HEAD (LH, RH) Fuse (R/B No.2) 3. Headlight Control Relay (R/B No.2) 4. Integration Relay 5. Headlight Dimmer Switch 6. Light Control Switch 7. Wire Harness	BE-17 BE-13 BE-17 BE-17
Headlight does not light. (Taillight does not light up)	1. Headlight Bulb 2. Integration Relay 3. Light Control Switch 4. Wire Harness	BE-13 BE-17
Only one side light does not light.	1. Headlight Bulb 2. HEAD (LH, RH) Fuse (R/B No.2) 3. Wire Harness	
"Lo-Beam" does not light.	1. Headlight Dimmer Switch 2. Wire Harness	BE-17
"Hi-Beam" does not light.	1. Headlight Dimmer Switch 2. Wire Harness	BE-17
"Flash" does not light.	1. Headlight Dimmer Switch 2. Wire Harness	BE-17

**CANADA:
HEADLIGHT AND TAILLIGHT SYSTEM**

Symptom	Suspect Area	See page
Headlight does not light. (Taillight is normal)	<ol style="list-style-type: none"> 1. Headlight Bulb 2. Headlight Control Relay (R/B No.2) 3. D.R.L. Relay 4. D.R.L. No.2 Relay (R/B No.2) 5. D.R.L. No.3 Relay 6. Integration Relay 7. Headlight Dimmer Switch 8. Light Control Switch 9. Wire Harness 	<p>BE-17 BE-17 BE-17 BE-17 BE-13 BE-17 BE-17</p>
Headlight does not light. (Taillight does not light up)	<ol style="list-style-type: none"> 1. D.R.L. Relay 2. D.R.L. No.2 Relay (R/B No.2) 3. D.R.L. No.3 Relay 4. Integration Relay 5. Light Control Switch 6. Wire Harness 	<p>BE-17 BE-17 BE-17 BE-13 BE-17</p>
Only one side light does not light.	<ol style="list-style-type: none"> 1. Headlight Bulb 2. Wire Harness 	
"Lo-Beam" does not light (ALL).	<ol style="list-style-type: none"> 1. Headlight Control Relay (R/B No.2) 2. Wire Harness 	BE-17
"Lo-Beam" does not light (ONE SIDE).	<ol style="list-style-type: none"> 1. Headlight Bulb 2. HEAD LH-LWR Fuse (R/B No.2) 3. HEAD RH-LWR Fuse (R/B No.2) 4. Wire Harness 	
"Hi-Beam" does not light (ALL).	<ol style="list-style-type: none"> 1. D.R.L. Relay 2. D.R.L. No.2 Relay (R/B No.2) 3. D.R.L. No.3 Relay 4. Headlight Dimmer Switch 5. Wire Harness 	<p>BE-17 BE-17 BE-17 BE-17</p>
"Hi-Beam" does not light (ONE SIDE).	<ol style="list-style-type: none"> 1. Headlight Bulb 2. HEAD LH-UPR Fuse (R/B No.2) 3. HEAD RH-UPR Fuse (R/B No.2) 4. Wire Harness 	
"Flash" does not light.	<ol style="list-style-type: none"> 1. D.R.L. Relay 2. D.R.L. No.2 Relay (R/B No.2) 3. D.R.L. No.3 Relay 4. Headlight Dimmer Switch 5. Wire Harness 	<p>BE-17 BE-17 BE-17 BE-17</p>
"Auto Turn-off System" dose not operate.	<ol style="list-style-type: none"> 1. GAUGE Fuse (J/B No.1) 2. Integration Relay 3. Door Courtesy Switch (Driver's) 4. Wire Harness 	<p>BE-13 BE-28</p>
Headlight does not light with light control SW in HEAD.	<ol style="list-style-type: none"> 1. Integration Relay 2. D.R.L. Relay 3. D.R.L. No.2 Relay (R/B No.2) 4. D.R.L. No.3 Relay 5. Light Control Switch 6. Wire Harness 	<p>BE-13 BE-17 BE-17 BE-17 BE-17</p>
Headlight does not go out with light control SW in OFF.	<ol style="list-style-type: none"> 1. Headlight Control Relay (R/B No.2) 2. Wire Harness 	BE-17

Taillight does not light with light control SW in TAIL.	<ol style="list-style-type: none"> 1. Taillight Relay (J/B No.1) 2. Integration Relay 3. Light Control Switch 4. Wire Harness 	BE-17 BE-13 BE-17
Taillight does not go out with light control SW in OFF.	<ol style="list-style-type: none"> 1. Taillight Relay (J/B No.1) 2. Integration Relay 3. Light Control switch 4. Wire Harness 	BE-17 BE-13 BE-17
Headlight and Taillight do not light with engine running and light control SW in OFF.	<ol style="list-style-type: none"> 1. GAUGE Fuse (J/B No.1) 2. Generator L Terminal 3. D.R.L. Relay 4. D.R.L. No.2 Relay (R/B No.2) 5. D.R.L. No.3 Relay 6. Parking Brake Switch 7. Wire Harness 	BE-17 BE-17 BE-17 BE-43

FOG LIGHT SYSTEM

Symptom	Suspect Area	See page
Fog light does not light with light control SW HEAD. (Headlight is normal.)	<ol style="list-style-type: none"> 1. FOG Fuse (R/B No.2) 2. HEAD Fuse (R/B No.2) 3. Fog Light Relay (R/B No.2) 4. Fog Light Switch 5. Wire Harness 	BE-23 BE-23
Fog light does not light with light control SW HEAD. (Headlight does not light)	<ol style="list-style-type: none"> 1. Headlight and Taillight system 2. Wire Harness 	BE-15
Only one light does not light.	<ol style="list-style-type: none"> 1. Bulb 2. Wire Harness 	

TURN SIGNAL HAZARD WARNING SYSTEM

Symptom	Suspect Area	See page
"Hazard" and "Turn" do not light up.	<ol style="list-style-type: none"> 1. Hazard Warning Switch 2. Turn Signal Flasher 3. Wire Harness 	BE-26 BE-26
The flashing frequency is abnormal.	<ol style="list-style-type: none"> 1. Bulb 2. Turn Signal Flasher 3. Wire Harness 	BE-26
Hazard warning light does not light up. (Turn is normal.)	<ol style="list-style-type: none"> 1. HAZ-HORN Fuse (R/B No.2) 2. Wire Harness 	
Hazard warning light does not light up in one direction.	<ol style="list-style-type: none"> 1. Hazard Warning Switch 2. Wire Harness 	BE-26
Turn signal does not light up. (Combination meter, wiper and washer do not operate.)	<ol style="list-style-type: none"> 1. TURN Fuse (J/B No.1) 2. Ignition Switch 3. Turn Signal Switch 4. Wire Harness 	BE-13 BE-26
Turn signal does not light up.	<ol style="list-style-type: none"> 1. TURN Fuse (J/B No.1) 2. Turn Signal Switch 3. Wire Harness 	BE-26
Turn signal does not light up in one direction.	<ol style="list-style-type: none"> 1. Turn Signal Switch 2. Wire Harness 	BE-26
Only one bulb does not light up.	<ol style="list-style-type: none"> 1. Bulb 2. Wire Harness 	

INTERIOR LIGHT SYSTEM

Symptom	Suspect Area	See page
Only one light does not light up.	1. Bulb 2. Wire Harness	
Interior light does not light up (All).	1. DOME Fuse (R/B No.2) 2. Integration Relay 3. Wire Harness	BE-28
"Illuminated Entry System" does not operate.	1. Integration Relay 2. Door Courtesy Switch 3. Door Key Lock and Unlock Switch 4. Door Unlock Detection Switch 5. Wire Harness	BE-28 BE-28 DI-656 DI-638
Front personal light does not light up.	1. Bulb 2. Front Personal Light 3. Wire Harness	BE-28
Luggage room light does not light up.	1. Bulb 2. Luggage Room Light Switch	BE-28

BACK-UP LIGHT SYSTEM

Symptom	Suspect Area	See page
Back Up Light does not light up.	1. Bulb 2. GAUGE Fuse (J/B No.1) 3. Ignition Switch 4. Back-up Light Switch (M/T) 5. Park/Neutral Position Switch (A/T) 6. Wire Harness	BE-13 BE-31 DI-354 DI-423
Back Up Light remains always on.	1. Wire Harness	
Only one light does not light up.	1. Bulb 2. Wire Harness	

STOP LIGHT SYSTEM

Symptom	Suspect Area	See page
Stop light does not light up.	1. Bulb 2. STOP Fuse (J/B No.1) 3. Stop Light Switch 4. Wire Harness	BE-33
Stop light remains always on.	1. Stop Light Switch 2. Wire Harness	BE-33
Only one light does not light up.	1. Bulb 2. Wire Harness	

WIPER AND WASHER SYSTEM

Symptom	Suspect Area	See page
Wipers and washers do not operate.	1. WIPER Fuse (J/B No.1) 2. Ignition Switch 3. Wiper and Washer Switch 4. Wire Harness	BE-13 BE-35
Front wiper does not operate.	1. Front Wiper and Washer Switch 2. Front Wiper Motor 3. Wire Harness	BE-35 BE-35
Rear wiper does not operate.	1. Rear Wiper and Washer Switch 2. Rear Wiper Motor and Relay 3. Wire Harness	BE-35 BE-35
Front washer does not operate.	1. Front Wiper and Washer Switch 2. Washer Motor 3. Wire Harness	BE-35 BE-35
Rear washer does not operate.	1. Rear Wiper and Washer Switch 2. Washer Motor 3. Wire Harness	BE-35 BE-35

COMBINATION METER**METER, GAUGES AND ILLUMINATION:**

Symptom	Suspect Area	See page
Tachometer, Fuel Gauge and Engine Coolant Temperature Gauge do not operate.	1. GAUGE Fuse (J/B No.1) 2. Meter Circuit 3. Wire Harness	BE-40
Speedometer does not operate.	1. Vehicle Speed Sensor 2. Meter Circuit 3. Wire Harness	BE-43 BE-40
Tachometer does not operate.	1. Igniter 2. ECM 3. Meter Circuit 4. Wire Harness	DI-1 DI-145 BE-40
Fuel Gauge does not operate or abnormal operation.	1. Fuel Receiver Gauge 2. Fuel Sender Gauge 3. Meter Circuit 4. Wire Harness	BE-43 BE-43 BE-40
Engine Coolant Temperature Gauge does not operate or abnormal operation.	1. Engine Coolant Temperature Receiver Gauge 2. Engine Coolant Temperature Sender Gauge 3. Meter Circuit 4. Wire Harness	BE-43 BE-43 BE-40
All illumination lights do not light up.	1. TAIL Fuse (J/B No.1) 2. Light Control Rheostat 3. Meter Circuit 4. Wire Harness	BE-43 BE-40
Only one illumination light does not light up.	1. Bulb 2. Meter Circuit	BE-40

WARNING LIGHTS:

Symptom	Suspect Area	See page
Warning lights do not light up. (Except Discharge and Door Open)	1. Bulb 2. IGN Fuse (J/B No.1) 3. Ignition Switch 4. Meter Circuit 5. Generator 6. Wire Harness	BE-13 BE-40
Brake Warning Light does not light up.	1. Bulb 2. Brake Fluid Level Warning Switch 3. Parking Brake Switch 4. Bulb Check Relay 5. Meter Circuit 6. Wire Harness	BE-43 BE-43 BE-40
Seat Belt Warning Light does not light up.	1. Bulb 2. Seat Belt Buckle Switch 3. Integration Relay 4. Meter Circuit 5. Wire Harness	BE-43 BE-13 BE-40
Engine Oil Level Warning Light does not light up.	1. Bulb 2. Engine Oil Level Warning Switch 3. Meter Circuit 4. Wire Harness	BE-43 BE-40
Low Oil Pressure Warning Light does not light up.	1. Bulb 2. Low Oil Pressure Warning Switch 3. Meter Circuit	BE-43 BE-40
Door Open Warning Light does not light up.	1. Bulb 2. DOME Fuse (R/B No.2) 3. Door Courtesy Switch 4. Luggage Room Light Switch 5. Integration Relay 6. Meter Circuit 7. Wire Harness	BE-28 BE-28 BE-13 BE-40
Master Warning Light does not light up.	1. Bulb 2. Telltale Light Circuit 3. Meter Circuit 4. Wire Harness	BE-40 BE-40

INDICATOR LIGHTS:

Symptom	Suspect Area	See page
SRS Indicator Light does not light up.	1. Bulb 2. Center Airbag Sensor 3. Wire Harness	DI-555
ABS Indicator Light does not light up.	1. Bulb 2. Traction ECU 3. Wire Harness	DI-499
Malfunction Indicator Light does not light up.	1. Bulb 2. ECM 3. Wire Harness	DI-1 DI-145
TRAC OFF Indicator Light does not light up.	1. Bulb 2. Traction Solenoid Relay 3. Traction ECU 4. Wire Harness	DI-499 DI-499

Security Indicator Light does not light up.	1. Light Emitting Diode 2. Theft Deterrent and Door Lock ECU 3. Wire Harness	DI-608
A/T Shift Position Indicator Light does not light up.	1. Bulb 2. Park/Neutral Position Switch 3. Light Control Rheostat 4. Meter Circuit 5. Wire Harness	DI-354 DI-423 BE-43 BE-40
MANU Indicator Light does not light up.	1. Bulb 2. ECM 3. Meter Circuit 4. Wire Harness	BE-40
O/D OFF Indicator Light does not light up.	1. Bulb 2. O/D Main Switch 3. ECM 4. Meter Circuit 5. Wire Harness	BE-43 DI-1 DI-145 BE-40
TRAC Indicator Light does not light up.	1. Bulb 2. ABS and Traction ECU 3. Meter Circuit 4. Wire Harness	BE-40
Turn Indicator Light does not light up.	1. Bulb 2. Turn Signal and Hazard Warning System 3. Meter Circuit 4. Wire Harness	BE-25 BE-40
High Beam Indicator Light does not light up.	1. Bulb 2. Headlight and Taillight System 3. Meter Circuit 4. Wire Harness	BE-15 BE-40
CRUISE Indicator Light does not light up.	1. Bulb 2. Cruise Control ECU 3. Meter Circuit 4. Wire Harness	DI-660 BE-40
SNOW Indicator Light does not light up.	1. Bulb 2. Traction ECU 3. Meter Circuit 4. Wire Harness	BE-40

ELECTRIC TENSION REDUCER SYSTEM

Symptom	Suspect Area	See page
Tension Reducer does not operate. (Driver's and Passenger's)	1. ECU-IG fuse (J/B No.1) 2. Wire Harness	
Tension Reducer does not operate. (Only one side)	1. Buckle Switch 2. Tension Reducer Solenoid 3. Wire Harness	BE-54 BE-43

DEFOGGER SYSTEM

Symptom	Suspect Area	See page
All defogger systems do not operate.	1. GAUGE Fuse (J/B No.1) 2. DEFOG Fuse (J/B No.1) 3. Defogger Relay (R/B No.4) 4. Defogger Switch 5. A/C Amplifier 6. Wire Harness	BE-56 BE-56 DI-711
Rear window defogger does not operate.	1. Defogger Wires 2. Wire Harness	BE-56
Mirror defogger does not operate.	1. MIR-HTR Fuse (J/B No.1) 2. Mirror Defogger 3. Wire Harness	BE-56

POWER WINDOW CONTROL SYSTEM

Symptom	Suspect Area	See page
Power window does not operate. (Power door lock does not operate.)	1. POWER Fuse (R/B No.2) 2. DOOR Fuse (J/B No.1) 3. Ignition Switch 4. Power Window Master Switch 5. Wire Harness	BE-13 BE-60
Power Window does not operate. (Power door lock is normal.)	1. GAUGE Fuse (J/B No.1) 2. Power Main Relay (J/B No.1) 3. Ignition Switch 4. Power Window Master Switch 5. Wire Harness	BE-60 BE-13 BE-60
"One Touch Power Window System" does not operate.	1. Power Window Master Switch	BE-60
Only one window glass does not move.	1. Power Window Master Switch 2. Power Window Switch 3. Power Window Motor 4. Wire Harness	BE-60 BE-60 BE-60
"Window Lock System" does not operate.	1. Power Window Master Switch	BE-60
Illumination does not light up.	1. Power Window Master Switch	BE-60

POWER SEAT CONTROL SYSTEM

Symptom	Suspect Area	See page
Power seat does not operate.	1. POWER Fuse (R/B No.2) 2. DOOR Fuse (J/B No.1) 3. Power Seat Switch 4. Wire Harness	BE-65
"Slide operation" does not operate.	1. Power Seat Switch 2. Sliding Motor 3. Wire Harness	BE-65 BE-65
"Reclining operation" does not operate.	1. Power Seat Switch 2. Reclining Motor 3. Wire Harness	BE-65 BE-65

POWER MIRROR CONTROL SYSTEM

Symptom	Suspect Area	See page
Mirror does not operate.	1. RAD No.2 Fuse (J/B No.1) 2. Mirror Switch 3. Mirror Motor 4. Wire Harness	BE-68 BE-68
Mirror operates abnormally.	1. Mirror Switch 2. Mirror Motor 3. Wire Harness	BE-68 BE-68

SEAT HEATER SYSTEM

Symptom	Suspect Area	See page
Seat heaters do not operate. (Driver's and Passenger's)	1. SEAT HTR Fuse (J/B No.1) 2. Wire Harness	
Driver's seat heater does not operate.	1. Seat Heater Switch (Driver's) 2. Seat Heater 3. Wire Harness	BE-70 BE-70
Passenger's seat heater does not operate.	1. Seat Heater Switch (Passenger's) 2. Seat Heater 3. Wire Harness	BE-70 BE-70
Seat heater temperature is too hot.	1. Seat Heater	BE-70