


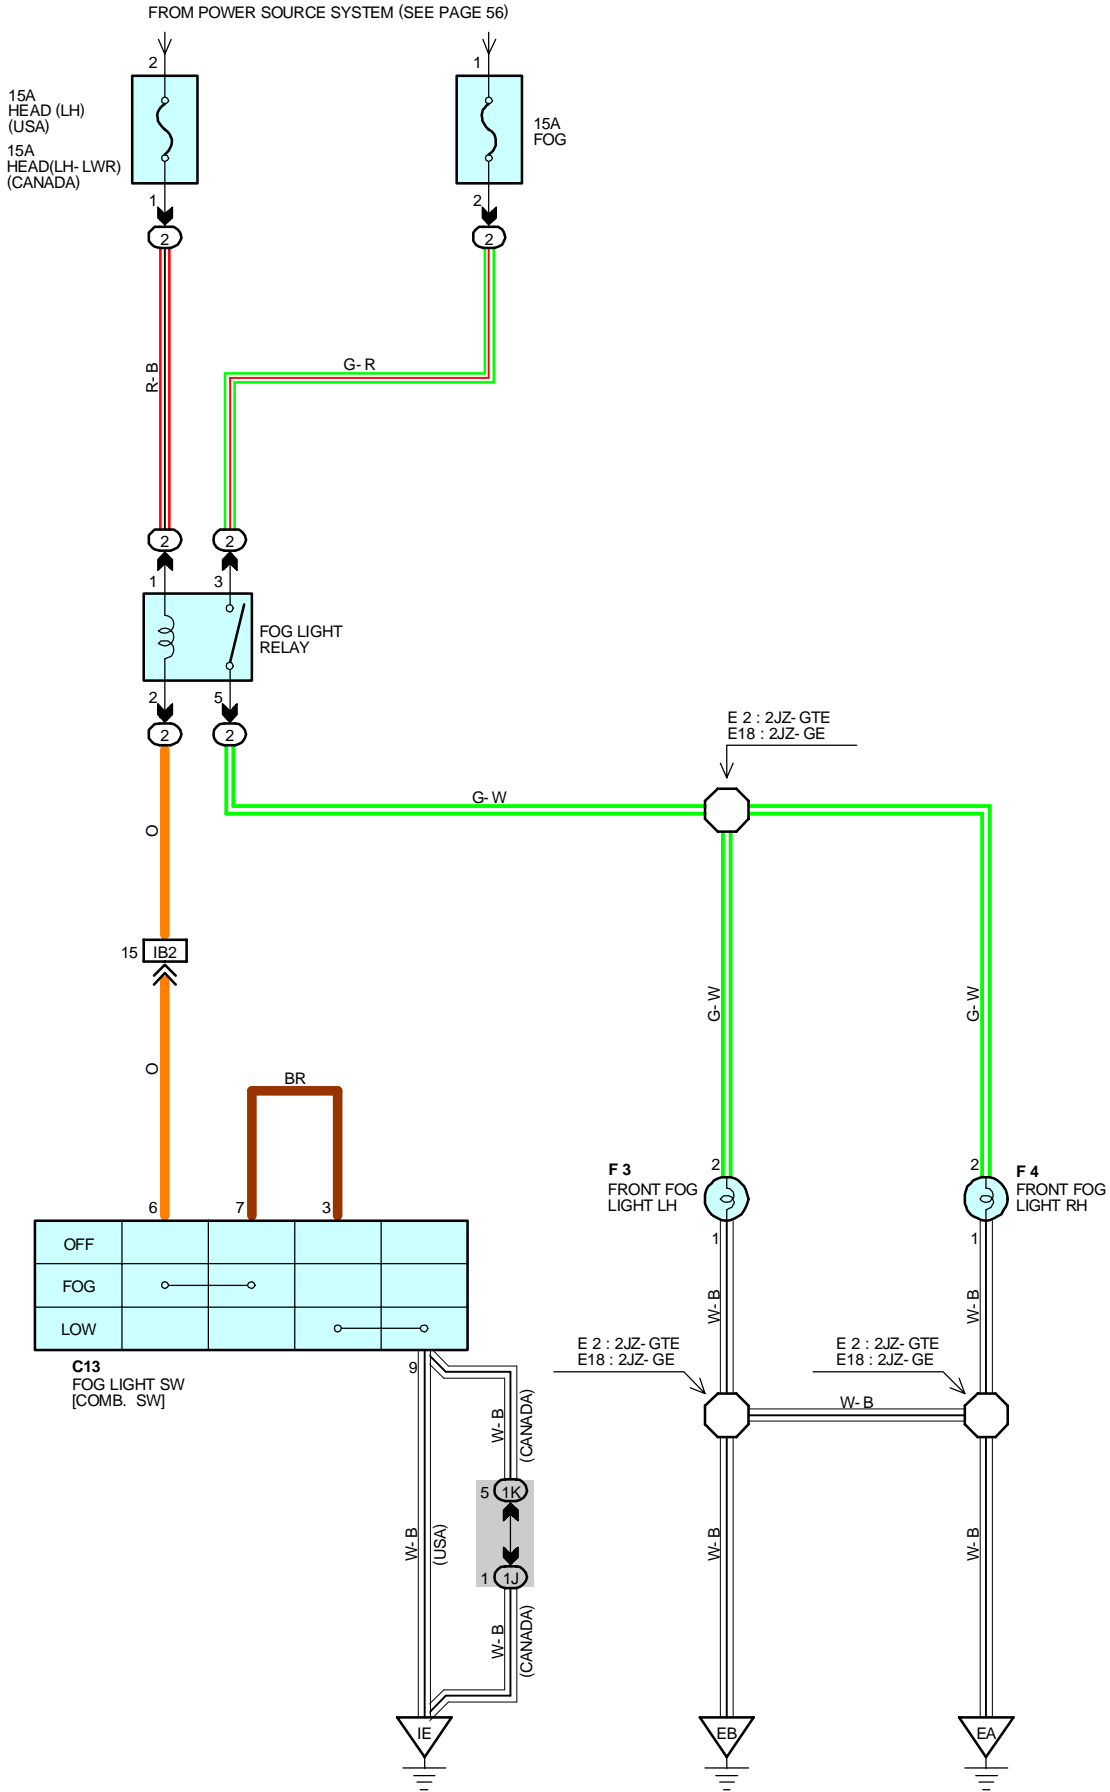

FOG LIGHT



SERVICE HINTS

FOG LIGHT RELAY

(2)3-(2)5 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION, DIMMER SW AT **LOW** POSITION AND THE FOG LIGHT SW **ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	28	F3	26 (2JZ-GE)	F4	26 (2JZ-GE)
F3	24 (2JZ-GTE)	F4	24 (2JZ-GTE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1J	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1K		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IB2	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	32 (2JZ-GTE)	FRONT SIDE OF RIGHT FENDER
	34 (2JZ-GE)	
EB	32 (2JZ-GTE)	FRONT SIDE OF LEFT FENDER
	34 (2JZ-GE)	
IE	36	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E2	32	ENGINE ROOM MAIN WIRE	E18	34	ENGINE ROOM MAIN WIRE

C13 BLACK

F3 GRAY

F4 GRAY

