


INSPECTION

1. **DRAIN ENGINE COOLANT**
2. **REMOVE ECT SENSOR**
 - (a) Disconnect the ECT sensor connector.
 - (b) Using SST, remove the ECT sensor and gasket.
SST 09205-76030

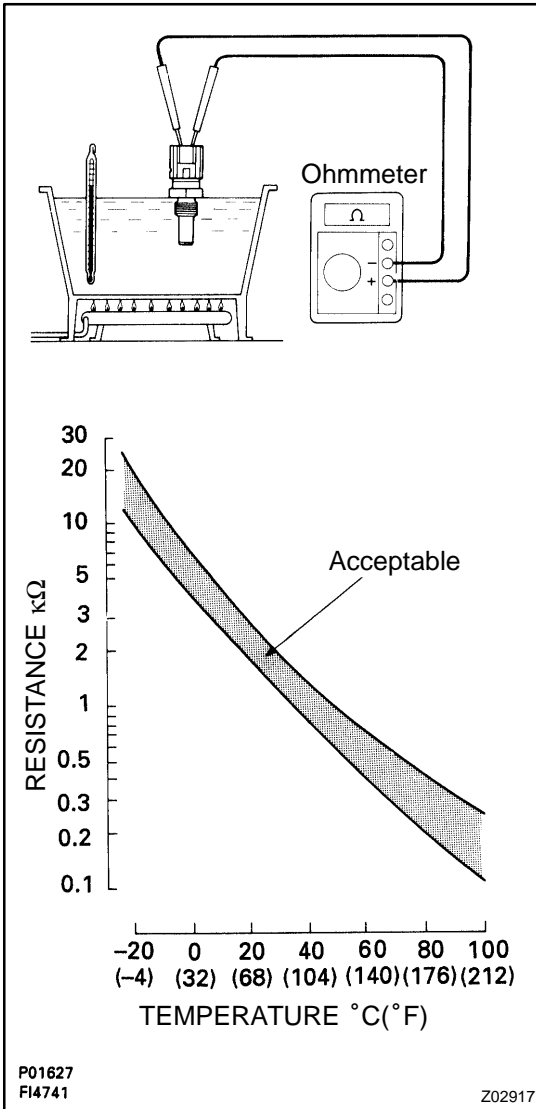

3. **INSPECT ECT SENSOR**

Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to the graph

If the resistance is not as specified, replace the ECT sensor.

4. **REINSTALL ECT SENSOR**

- (a) Install a new gasket to the ECT sensor.
- (b) Using SST, install the ECT sensor.
SST 09205-76030
- (c) Connect the ECT sensor connector.

5. **REFILL WITH ENGINE COOLANT**