



INSTALLATION

1. **PLACE THERMOSTAT IN WATER INLET**
 - (a) Install a new gasket to the thermostat.
 - (b) Align the jiggle valve of the thermostat with the protrusion of the water inlet.
2. **INSTALL WATER INLET**
 - (a) Install the water inlet with the 2 nuts.
Torque:
2JZ-GE 8.8 N·m (90 kgf·cm, 78 in.-lbf)
2JZ-GTE 21 N·m (210 kgf·cm, 15 ft·lbf)
 - (b) 2JZ-GTE:
Connect the lower radiator hose to the radiator.
3. **2JZ-GTE:**
INSTALL ENGINE UNDER COVER
4. **FILL WITH ENGINE COOLANT**
5. **START ENGINE AND CHECK FOR COOLANT LEAKS**