

- \*1 : CANADA
- \*2 : USA
- \*3 : 2JZ- GTE
- \*4 : 2JZ- GE
- \*5 : W/ STEREO POWER AMPLIFIER
- \*6 : W/O STEREO POWER AMPLIFIER

 : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J1	29	J2	29		

 : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT LEFT)
4	23	R/B NO. 4 (LEFT KICK PANEL)
5	23	R/B NO. 5 (ENGINE COMPARTMENT RIGHT)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	20	FRONT DOOR LH WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1F	20	ROOF WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1G	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H		
1J		
1K		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IB5	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (RIGHT KICK PANEL)
IC1	36	FLOOR NO. 2 WIRE AND COWL WIRE (LEFT KICK PANEL)
IE1	36	INSTRUMENT PANEL WIRE AND FLOOR NO. 2 WIRE (LEFT KICK PANEL)
IF1	36	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL REINFORCEMENT LH)
IF3	36	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT KICK PANEL)
II1	38	ENGINE WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IJ1	38	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IK1	38	COWL NO. 4 WIRE AND COWL WIRE (RIGHT KICK PANEL)
IL1	38	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE
BM1	40	BACK DOOR NO. 1 WIRE AND FLOOR NO. 2 WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	40	BACK DOOR NO. 2 WIRE AND BACK DOOR NO. 1 WIRE
BP1	40	FUEL GAUGE WIRE AND FLOOR NO. 2 WIRE (LUGGAGE ROOM FRONT LH)
BQ1	42	FLOOR NO. 2 WIRE AND SEAT WIRE (UNDER THE FRONT LH SEAT)

 : GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
EA	32 (2JZ-GTE)	FRONT SIDE OF RIGHT FENDER
	34 (2JZ-GE)	
EB	32 (2JZ-GTE)	FRONT SIDE OF LEFT FENDER
	34 (2JZ-GE)	
EC	32 (2JZ-GTE)	FRONT SIDE OF INTAKE MANIFOLD
	34 (2JZ-GE)	
ED	32 (2JZ-GTE)	REAR SIDE OF INTAKE MANIFOLD
	34 (2JZ-GE)	
IE	36	LEFT KICK PANEL
IF		
IG	36	RIGHT KICK PANEL
IH		
BI	40	LEFT QUARTER PILLAR
BJ	40	LOWER BACK PANEL CENTER
BK	40	RIGHT SIDE OF HIGH MOUNTED STOP LIGHT



**: SPLICE POINTS**


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E2	32	ENGINE ROOM MAIN WIRE	I10	38	COWL WIRE
E5			I11		
E7			I14		
E9			I17		
E14	32	ENGINE WIRE	I18	38	COWL WIRE
E18	34	ENGINE ROOM MAIN WIRE	I21	38	INSTRUMENT PANEL WIRE
E19			I23	38	COWL WIRE
E20			I24		
E21			I25	38	INSTRUMENT PANEL WIRE
E24	34	ENGINE WIRE	B1	40	FRONT DOOR LH WIRE
E27			B2	40	FRONT DOOR RH WIRE
E28			B3	40	FLOOR NO. 2 WIRE
I1			B4		
I2	B5				
I3	38	INSTRUMENT PANEL WIRE	B6		
I4	38	COWL WIRE	B7		
I7	38	FLOOR NO. 2 WIRE	B9	42	SEAT WIRE
I8	38	INSTRUMENT PANEL WIRE	B10	40	BACK DOOR NO. 2 WIRE
I9	38	COWL WIRE			

J 1

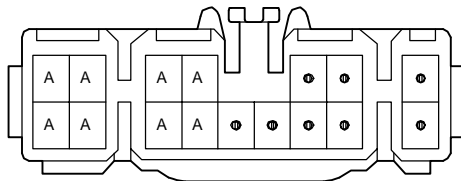

(HINT : SEE PAGE 7)

J 2

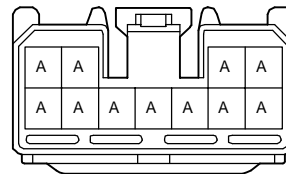

(HINT : SEE PAGE 7)