



**SERVICE HINTS**

**HEADLIGHT RELAY**

2-1 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION

**C13 LIGHT CONTROL SW [COMB. SW]**

13-11 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION

**C13 LIGHT CONTROL SW [COMB. SW]**

14-9 : CLOSED WITH THE DIMMER SW AT **FLASH** POSITION  
 12-9 : CLOSED WITH THE DIMMER SW AT **HIGH** OR **FLASH** POSITION

**○ : PARTS LOCATION**

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C12	28	H2	24 (2JZ-GTE)	H4	24 (2JZ-GTE)
C13	28		27 (2JZ-GE)		27 (2JZ-GE)
H1	24 (2JZ-GTE)	H3	24 (2JZ-GTE)	I20	29
	27 (2JZ-GE)		27 (2JZ-GE)		

**○ : RELAY BLOCKS**

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO.2 (ENGINE COMPARTMENT LEFT)

**○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1J	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1K		
2A	22	BATTERY AND J/B NO. 2 (ENGINE COMPARTMENT LEFT)

**□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IB1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IB2		
IF1	36	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL REINFORCEMENT LH)

**▽ : GROUND POINTS**

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	32 (2JZ-GTE)	FRONT SIDE OF RIGHT FENDER
	34 (2JZ-GE)	
IE	36	LEFT KICK PANEL

**○ : SPLICE POINTS**

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E2	32	ENGINE ROOM MAIN WIRE	E21	34	ENGINE ROOM MAIN WIRE
E9			I2	38	COWL WIRE
E18	34				

