

POWER STEERING FLUID BLEEDING

SR13U-01

1. **CHECK FLUID LEVEL**
(See page [SR-4](#))
2. **JACK UP FRONT OF VEHICLE AND SUPPORT IT WITH STANDS**
3. **TURN STEERING WHEEL**

With the engine stopped, turn the steering wheel slowly from lock to lock several times.

NOTICE:

Take care that some fluid remains in the oil reservoir.

4. **LOWER VEHICLE**
5. **START ENGINE**


Run the engine at idle for a few minutes.

6. **TURN STEERING WHEEL**
 - (a) With the engine at idling, turn the steering wheel to left or right full lock and keep it there for 2-3 seconds, then turn the wheel to the opposite full lock and keep it there for 2-3 seconds.
 - (b) Repeat (a) several times.
7. **STOP ENGINE**

8. **CHECK FOR FOAMING OR EMULSIFICATION**

If the system has to be bled twice specifically because of foaming or emulsification, check for fluid leaks in the system.

9. **CHECK FLUID LEVEL**
(See page [SR-4](#))

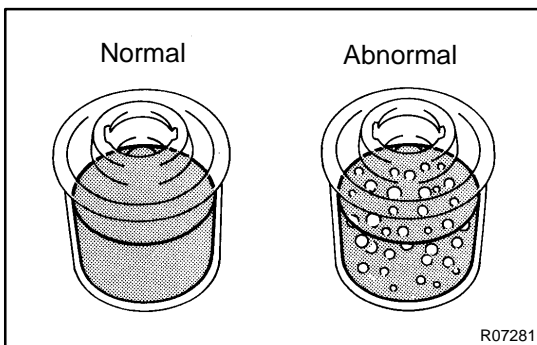

R07281