


INSTALLATION

INSTALL ANTENNA ROD

(a) Insert the cable of the rod until it reaches the bottom.

HINT:

- When inserting the cable, the teeth on the cable must face toward the rear of the vehicle.
- Insert the cable approx. 400 mm.

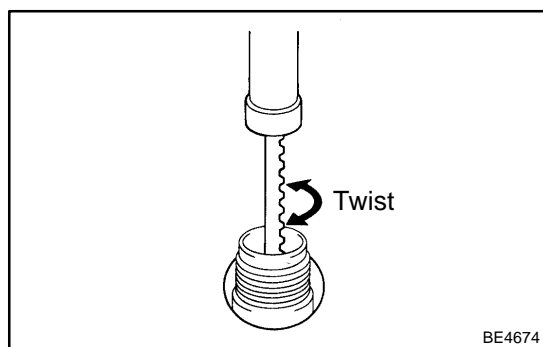

(b) Wind the cable to retract the rod by turning the ignition switch to "LOCK" position.

HINT:

- If the ignition switch is already in "LOCK" position, do step 1 (c) first, then turn the ignition switch to "ACC" position.
- In case the cable is not wound, twist it as shown in the illustration.
- Even if the rod has not retracted fully, install the antenna nut and inspect the antenna rod operation. It will finally retract fully.

(c) Inspect the antenna rod operation by pushing the radio wave band select buttons.